




Forward this manual to all operators.
Failure to operate this equipment as
directed may cause injury and/or
property damage.

INSTALLATION AND OPERATION MANUAL

VEHICLE DOLLY

MODEL
RCD-1V

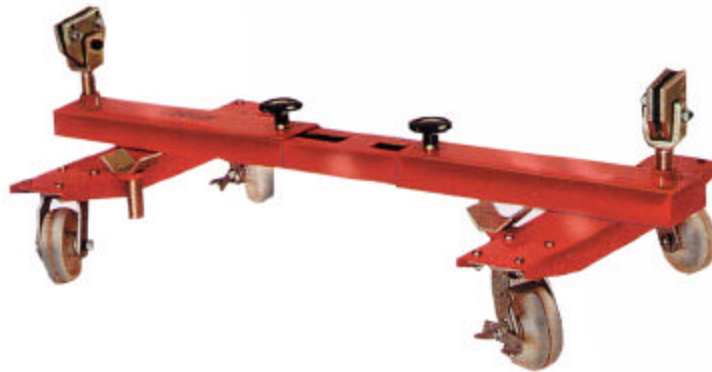

SHIPPING DAMAGE CLAIMS

When this equipment is shipped, title passes to the purchaser upon receipt from the carrier. Consequently, claims for the material(s) damaged in shipment must be made by the purchaser against the transportation company at the time shipment is received.

BE SAFE

Your new ranger vehicle dollies are designed and built with safety in mind. However, your overall safety can be increased by proper training and thoughtful operation on the part of the operator. DO NOT operate or repair this equipment without reading this manual and the important safety instructions shown inside.

Bend - Pak Inc.

1645 Lemonwood Drive
Santa Paula, CA 93060, U.S.A
Tel: 805 933 9970 - Fax: 805 933 9160

"The Benchmark Of Quality"

UPON DELIVERY

1. Carefully remove all packaging material.
2. Inspect the equipment and all parts for any signs of concealed shipment or storage damages.
3. Remember to report any shipping damage to the carrier and make a notation on the delivery receipt.

IMPORTANT SAFETY TIPS

Be sure to read all warning labels and the instruction manual prior to operation of this equipment.

Keep hands and body clear of all pinch points. Avoid moving parts when in operation.

Do not use beyond the rated capacity.

Use only on hard flat surfaces.

The vehicle dolly is limited for the use of supporting and moving partly dismantled or badly damaged vehicles only.

Do not use if you detect any structural failure. Ensure no components/parts are missing or damaged.

Ensure the vehicle engine is switched off and no person/s in the vehicle.

Keep the work area clean. All visitors and especially children should strictly be kept away from the work area.

This vehicle dolly should be operated by professional personnel only.

No modifications should be made to this oil drain. Repairs to this equipment should be attended to by qualified technicians only.


SPECIFICATIONS / FEATURES

CAPACITY EACH	MIN. HEIGHT	MAX. HEIGHT	MIN. WIDTH	MAX. WIDTH	LENGTH	SHIPPING WEIGHT
1,500 Lbs. 680 Kg	9-27/32" 250 mm	12-13/64" 310 mm	40-3/4" 1,035 mm	56-19/64" 1,430 mm	23-5/8" 600 mm	80 Lbs 36 Kg

ASSEMBLY INSTRUCTIONS

Follow the exploded diagram for the assembly of the vehicle dolly.

1. Attach the casters to the support beams using the bolts, split washers, washers and nuts. Ensure the two locking casters are in the same side.
2. Remove extension arm(C) from the main beam by unscrewing the knob(A).
3. Attach the main beam(E) to the support beams by fastening the bolts, spring washers, washers and nuts(B)
4. Ensure all the connections are tight and replace the extension arm(C) by screwing knob(A) into the holding plate inside the frame of the main beam(E).
5. Screw in the appropriate support into the end of the extension arm at point(X) and place unused set in the storage rings.

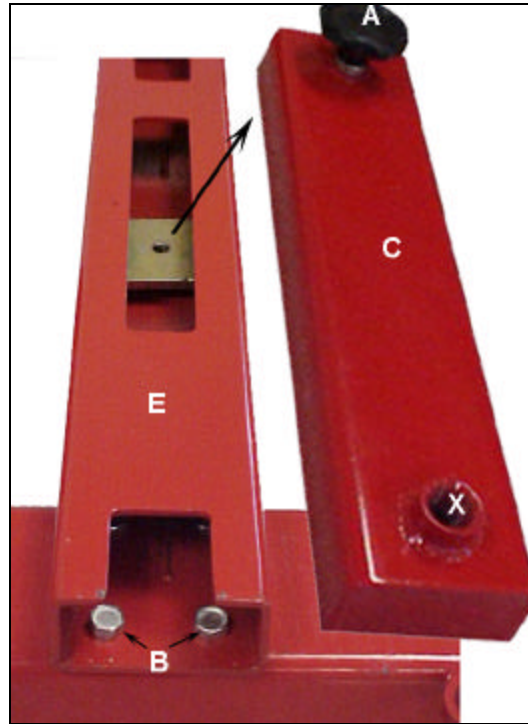

OPERATION INSTRUCTION

1. Adjust the arm and the clamp to the suitable position depending on different use.
2. Position the dolly supports under the vehicle manufacturer's recommended lifting points.
3. Use the clamps to correctly fit and tighten the support points.
4. Make sure no person and/or obstacles are beneath and the brakes are unlocked.
5. Roll the dolly into position and lock the brakes for safety.

MAINTENANCE

1. All dolly linkage and moving parts require frequent lubrication.
2. The dolly should be stored in a well ventilated place and free from moist.

EXPLODED DIAGRAM AND PARTS LIST

