



Forward this manual to all operators.
Failure to operate this equipment as
directed may cause injury and/or
property damage.

INSTALLATION AND OPERATION MANUAL

HEAVY DUTY
JACK STANDS



MODELS
RJS-3T
RJS-6T
RJS-12T

SHIPPING DAMAGE CLAIMS

When this equipment is shipped, title passes to the purchaser upon receipt from the carrier. Consequently, claims for the material damaged in shipment must be made by the purchaser against the transportation company at the time shipment is received.

BE SAFE

Your new heavy duty jack stands are designed and built with safety in mind. However, your overall safety can be increased by proper training and thoughtful operation on the part of the operator. DO NOT operate or repair this equipment without reading this manual and the important safety instructions shown inside.

Bend - Pak Inc.

1645 Lemonwood Drive
Santa Paula, CA 93060, U.S.A
Tel: 805 933 9970 - Fax: 805 933 9160

“The Benchmark Of Quality”

UPON DELIVERY

1. Carefully remove all packaging material.
2. Inspect the equipment and all parts for any signs of concealed shipment or storage damages.
3. Remember to report any shipping damage to the carrier and make a notation on the delivery receipt.

IMPORTANT SAFETY TIPS

Be sure to read all warning labels and the instruction manual prior to operation of this equipment.

Keep hands and body clear of all pinch points.

Do not overload jack stands beyond rated capacity. Overloading can cause damage or failure of the jack stands.


Position load on the center of the saddle only. Always use stands in pairs on hard level surface capable of sustaining the load. Use of stands on other than hard level surfaces can result in stand instability and possible loss of load.

SPECIFICATIONS / FEATURES

MODEL	HOLDING CAPACITY	LOWERED HEIGHT	MAXIMUM HEIGHT	BASE DIMENSIONS	SHIPPING WEIGHT (PAIR)
RJS-3T	6,000 Lbs. 2721 Kg	11-1/2" 292 mm	17" 431 mm	7" x 7-1/2" 178mm x 190mm	17 Lbs. 7.8 Kg
RJS-6T	12,000 Lbs. 5443 Kg	15-1/2" 393 mm	24-1/2" 622 mm	9" x 10-1/2" 229mm x 268mm	32 Lbs. 14.5 Kg
RJS-12T	24,000 Lbs. 10,886 Kg	17-3/4" 451 mm	28-1/2" 724 mm	12" x 10-3/4" 305mm x 273mm	60 Lbs. 27 Kg

OPERATION INSTRUCTIONS

1. Refer to your vehicle owner's manual for proper jacking procedures. Lift only on areas of the vehicle as specified by vehicle manufacturer.
2. Position stands under vehicle at points specified by the manufacturer as proper load support points.
3. To adjust stands: Hold control lever up while lifting saddle shaft to desired height. Push control lever down to lock pawl into teeth located in center column. **MAKE SURE PAWL IS FULLY ENGAGED INTO TEETH.** Then carefully load onto stands.

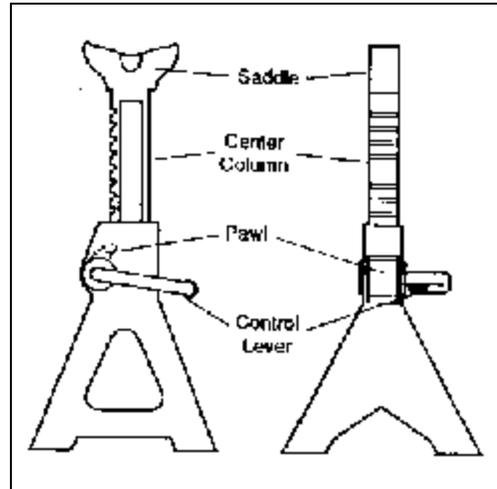

MAINTENANCE INSTRUCTIONS

Visual inspection shall be made before each use of the stands. Check for cracks, cracked welds and missing and /or damaged parts. Any stand that appears to be damaged in any way shall be removed from service immediately.

Because of the potential hazards associated with the misuse of equipment of this type, no modifications shall be made to the product.